

Environment, climate protection & resource conservation

Technical modifications reserved
2026 | EN



Sustainable production



CO₂ reduction



Sustainable products



Packaging and presentation systems



TIS
Units 12, 14 & 15
Luddite Way Business Park
Rawfolds Way, Rawfolds
Cleckheaton
BD19 5DQ



Wiha Tools Ltd,
841 Birchwood Boulevard,
Birchwood, WA3 7QU
www.wiha.com



VDE insulated tools from Wiha

Because safety comes first





Screwdriver with bit magazine PocketMax® electric



4
Bits



mixed with 4 slimBits

Order-No.	WH45296	1
⊖	1 x 3.5 mm x 75 mm	
⊕	1 x PH1 x 75 mm / 1 x PH2 x 75 mm	
⊗	1 x SL/PZ2 x 75 mm	

Tested according to IEC 60900.

Screwdriver with bit magazine LiftUp electric



6
Bits



Phillips, PlusMinus/Pozidriv,
slotted with 6 slimBits

Order-No.	WH38613	5
⊖	1 x 3.0 mm x 75 mm / 1 x 4.0 mm x 75 mm / 1 x 5.5 mm x 75 mm	
⊕	1 x PH1 x 75 mm / 1 x PH2 x 75 mm	
⊗	1 x SL/PZ2 x 75 mm	

Manufactured acc. to IEC 60900.

E-screwdriver, speedE® II electric



7
pcs



7 pcs with slimBits, batteries and USB charger in L Boxx Mini

Order-No.	WH44318	1
-----------	---------	---

Fastening / Jamming

- E-screwdriver handle speedE® II
- ⊖ slimBit electric bit Slotted 3.5 mm x 75 mm (41159)
- ⊕ slimBit electric bit PlusMinus/Pozidriv SL/PZ2 x 75 mm (34590)

Various

- Charger for battery type 18500 Li-Ion with USB
- Battery set, 18500 Li-ion 2 units in box (41914)
- 18500 Li-ion battery

Fine screwdriver set PicoFinish® slimVario® electric



4
pcs



4-pcs. with slimBits

Order-No.	WH43167	5
	Fine screwdriver PicoFinish® slimVario® electric	
⊖	2.0 mm	
⊕	PH0 x 75 mm	
⊗	PZ0 x 75 mm	

Manufactured acc. to IEC 60900.

Screwdriver with bit holder set slimVario® electric



4
pcs



Stubby 4 pieces with slimBits

Order-No.	WH41230	5
○	Screwdriver with bit holder SoftFinish® electric slimVario Stubby	
⊖	3.5 mm x 75 mm	
⊕	PH2 x 75 mm	
⊗	SL/PZ2 x 75 mm	

Manufactured acc. to IEC 60900.



Screwdriver and bit set slimVario®



slimBit electric bit set



19
pcs



6
Bits



Mixed, 19-pcs. incl. folding bag

2831T18

Order-No.	WH41231	1
○	1 x Screwdriver with bit holder SoftFinish® electric slimVario Stubby	
○	1 x Screwdriver with bit holder SoftFinish® electric slimVario for slimBits	
⊖	1 x 2.5 mm x 75 mm / 1 x 3.5 mm x 75 mm / 1 x 5.5 mm x 75 mm	
⊕	1 x PH1 x 75 mm / 1 x PH2 x 75 mm	
⊕	1 x PZ1 x 75 mm / 1 x PZ2 x 75 mm	
⊕	1 x SL/PZ1 x 75 mm / 1 x SL/PZ2 x 75 mm	
⊕	1 x T9 x 75 mm / 1 x T10 x 75 mm / 1 x T15 x 75 mm / 1 x T20 x 75 mm	
⊕	1 x 3.0 mm x 75 mm / 1 x 4.0 mm x 75 mm / 1 x 5.0 mm x 75 mm	
	1 x Folding bag	

Manufactured acc. to IEC 60900.

Slotted, Phillips 6-pcs.

SB2831B902

Order-No.	WH43159	1
⊖	1 x 2.5 mm x 75 mm / 1 x 3.5 mm x 75 mm / 1 x 5.5 mm x 75 mm / 1 x 6.5 mm x 75 mm	
⊕	1 x PH1 x 75 mm / 1 x PH2 x 75 mm	
	1 x slimBit box	

Tested according to IEC 60900.

slimBit electric



Slotted

Order-No.	⊖	mm	⊕	max. Nm	
WH34581	5,5	75	1,00	3,8	5
WH34582	6,5	75	1,20	5,5	5

Tested according to IEC 60900.

Phillips

Order-No.	⊕	mm	max. Nm	
WH34584	PH2	75	5,5	5

Tested according to IEC 60900.

PlusMinus/Pozidriv

Order-No.	⊕	mm	max. Nm	
WH34590	SL/PZ2	75	5,5	5

Tested according to IEC 60900.


Hex

Order-No.	⊕	mm	max. Nm	
WH37147	3,0	75	5,5	5

Tested according to IEC 60900.

Wiha ElectricVario Family: Many professionals. One system.

- Flexible and variable system with ~90 tools for all screwdriving tasks.
- slimBits tested at 10,000 V AC and approved for 1,000 V AC.
- Wiha slimBits ensure good, protected access to deep-set screws.

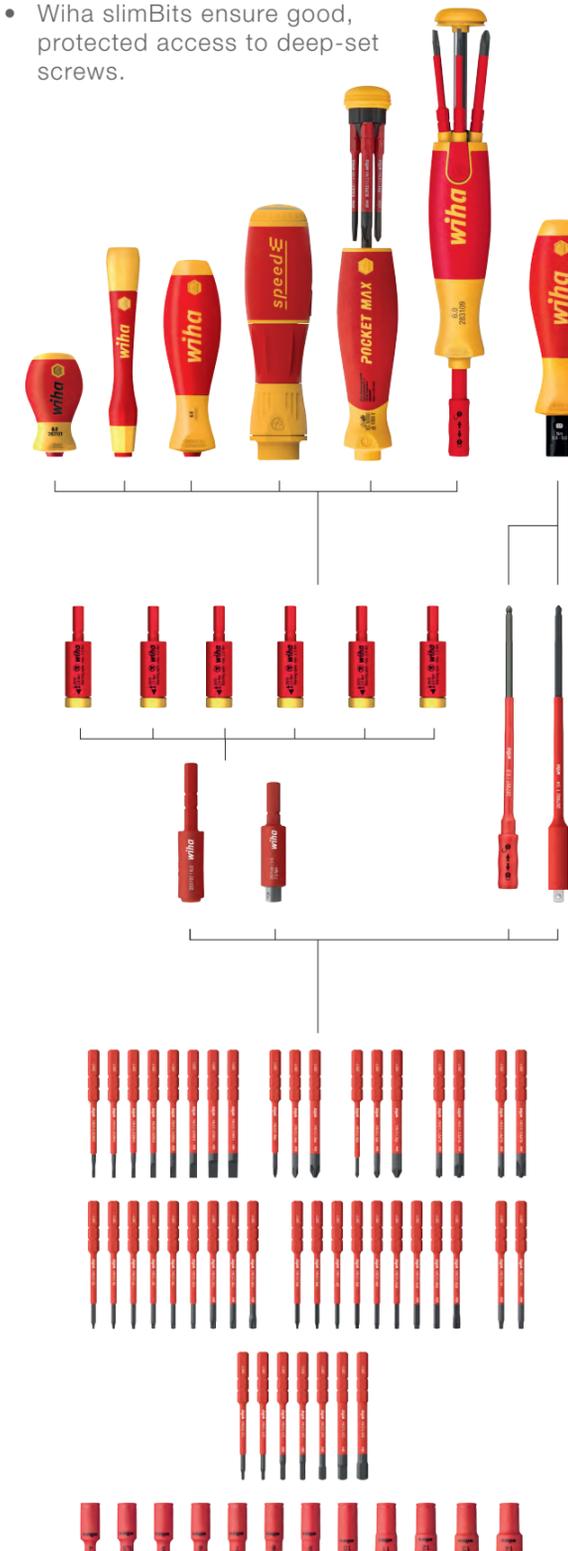



Torque screwdriver set TorqueVario®-S electric



5 pcs

0,8-5,0 Nm PlusMinus/Pozidriv variably adjustable torque limit 5-pcs.

Order-No.	
WH38074	1
○	1 x Torque screwdriver TorqueVario®-S electric variably adjustable torque limit
○	1 x Setting tool for torque screwdriver with long handle
○	1 x Adapter TorqueVario-S electric for slimBits
⊕	1 x SL/PZ1 x 75 mm / 1 x SL/PZ2 x 75 mm
DIN EN ISO 6789. Manufactured acc. to IEC 60900.	

Torque set easyTorque adapter electric



5 pcs

for slimBits and slimVario® holder, 5-pcs.

Order-No.	
WH41479	5
○	1 x 0.8 Nm / 1 x 2.0 Nm / 1 x 2.5 Nm / 1 x 2.8 Nm / 1 x 4.0 Nm
Manufactured acc. to IEC 60900.	

Torque screwdriver set TorqueVario®-S electric



19 pcs

0,8-5,0 Nm mixed, variably adjustable torque limit, 19 pcs. incl. folding bag

Order-No.	
WH36791	1
○	1 x Torque screwdriver TorqueVario®-S electric variably adjustable torque limit
○	1 x Setting tool for torque screwdriver with long handle
○	1 x Adapter TorqueVario-S electric for slimBits
⊖	1 x 2.5 mm x 75 mm / 1 x 3.5 mm x 75 mm / 1 x 5.5 mm x 75 mm / 1 x 6.5 mm x 75 mm
⊕	1 x PH1 x 75 mm / 1 x PH2 x 75 mm
⊕	1 x PZ1 x 75 mm / 1 x PZ2 x 75 mm
⊕	1 x SL/PZ1 x 75 mm / 1 x SL/PZ2 x 75 mm
⊕	1 x T9 x 75 mm / 1 x T10 x 75 mm / 1 x T15 x 75 mm / 1 x T20 x 75 mm / 1 x T25 x 75 mm
○	1 x Folding bag

DIN EN ISO 6789. Manufactured acc. to IEC 60900.

Torque screwdriver set TorqueVario®-S electric



14 pcs

0,8-5,0 Nm mixed, variably adjustable torque limit, 14 pcs. incl. folding bag

Order-No.	
WH40674	1
○	1 x Torque screwdriver TorqueVario®-S electric variably adjustable torque limit
○	1 x Setting tool for torque screwdriver with long handle
○	1 x Screwdriver with bit holder SoftFinish® electric slimVario for slimBits
○	Adapter TorqueVario-S electric for slimBits
⊖	1 x 2.5 mm x 75 mm / 1 x 3.5 mm x 75 mm / 1 x 5.5 mm x 75 mm
⊕	1 x PH1 x 75 mm / 1 x PH2 x 75 mm
⊕	1 x PZ1 x 75 mm / 1 x PZ2 x 75 mm
⊕	1 x SL/PZ1 x 75 mm / 1 x SL/PZ2 x 75 mm
○	1 x Folding bag

DIN EN ISO 6789. Manufactured acc. to IEC 60900.

Setting tool



for torque screwdriver with long handle			
Order-No.			
WH26864	90	146	10



Screwdriver with bit magazine PocketMax® magnetic



8 Bits

Mixed with 8 bits, 1/4"

Order-No.	
WH45292	1
⊖	1 x 4.5 mm / 1 x 6.5 mm
⊕	1 x PH1 / 1 x PH2
⊕	1 x PZ1 / 1 x PZ2
⊕	1 x T15 / 1 x T20

Screwdriver set SoftFinish® electric slimFix



6 pcs



Slotted, Pozidriv 6-pcs

Order-No.	WH36455	1
⊖	3.5 mm x 100 mm / 4.0 mm x 100 mm / 5.5 mm x 125 mm / 6.5 mm x 150 mm	
⊕	PZ1 x 80 mm / PZ2 x 100 mm	

Manufactured acc. to IEC 60900.

Slotted, Phillips, PlusMinus/Pozidriv 6-pcs.

Order-No.	WH38362	1
⊖	1 x 3.5 mm x 100 mm / 1 x 4.0 mm x 100 mm / 1 x 5.5 mm x 125 mm	
⊕	1 x PH1 x 80 mm / 1 x PH2 x 100 mm	
⊗	1 x SL/PZ2 x 100 mm	

Manufactured acc. to IEC 60900.

Screwdriver set SoftFinish® electric



6 pcs



Slotted, Pozidriv 6-pcs

Order-No.	WH25477	1
⊖	2.5 mm x 75 mm / 3.5 mm x 100 mm / 4.5 mm x 125 mm / 5.5 mm x 125 mm	
⊕	PZ1 x 80 mm / PZ2 x 100 mm	

Manufactured acc. to IEC 60900.

Screwdriver set SoftFinish® electric slimFix



2 pcs



Slotted, PlusMinus/Pozidriv, 2-pcs.

Order-No.	WH36333	1
⊖	3.5 mm x 100 mm	
⊗	SL/PZ2 x 100 mm	

Manufactured acc. to IEC 60900.

Screwdriver set SoftFinish® electric



2 pcs



PlusMinus/Pozidriv, 2-pcs.

Order-No.	WH32282	1
⊕	SL/PZ1 x 80 mm / SL/PZ2 x 100 mm	

Manufactured acc. to IEC 60900.

Screwdriver set SoftFinish® electric



PlusMinus/Pozidriv

Order-No.	WH30701	SL/PZ2	100	218	36	10
-----------	---------	--------	-----	-----	----	----

Manufactured acc. to IEC 60900.

Screwdriver SoftFinish®



Pozidriv with round blade

Order-No.	WH00770	PZ1	80	4.5	191	30	10
-----------	---------	-----	----	-----	-----	----	----

Magnetiser/ Demagnetiser



Order-No.	WH01508	5
-----------	---------	---



Wiha - A company and its people. Today and in the future.



How do we define corporate success? We focus just as much on sustainable corporate and organizational development as we do on individual development, freedom, and further development of our employees, customers, and partners. At home in the heart of the Black Forest, the responsible dealing with nature comes naturally to Wiha. We consciously place this aim above the maximization of sales and profits.

Our corporate culture and all organizational processes and aims are founded on the central values of responsibility, respect, and integrity.

Wiha as a partner for the future

- **Promotion of employees**
We support them in their further development and create best working conditions.
- **Active exchange with users**
Through close contact and constructive exchange we can accomplish our goals together.
- **Acting responsibly**
We live the principles of social responsibility and obligation to support our suppliers.
- **Reliable partnership**
Our active and personal partner management with the specialist trade creates a trusting sense of togetherness and care for each other.
- **Social commitment and cooperation**
Long-term partnerships with local educational and social institutions establish our place in the middle of society.
- **Committed to sustainability**
Products with a long service life, resource-saving processes, goals for minimizing waste, energy use, and emissions are part of our holistic sustainability strategy.



VDE-insulated tools from Wiha To work safer, more efficiently and with less strain on the body.



Certified safety – from our own safety testing procedure according to IEC standards.



Voltage testing: All Wiha VDE-tools, which have special markings, are individually tested at 10,000 V AC and are approved for 1,000 V AC and 1,500 V DC.



Cold shock test: Cooling down to -25° C. The skinning material must retain its toughness, so that it doesn't break when subjected to shock and knocks.



Test of electrical skinning properties: 24 hours storage in water, then 3 minutes test at 10,000 V AC. There must neither be flashover nor disruptive discharge.



Test of the adhesion of the skinning material coating: 168 hours storage at 70° C, then test of adhesion at 500 N.



Pressure tests: Test at 20 N pressure load, 70° C temperature and 5,000 V AC test voltage. No disruptive discharge may occur.



Test of combustion behaviour: The tools are subjected to a flame for 10 seconds. The skinning material must then extinguish and not continue to burn.

